



## 2019 + Mack Vehicle


### Installation Guide [for HRN-CE10K2 and HRN-CM24Y1 harnesses]

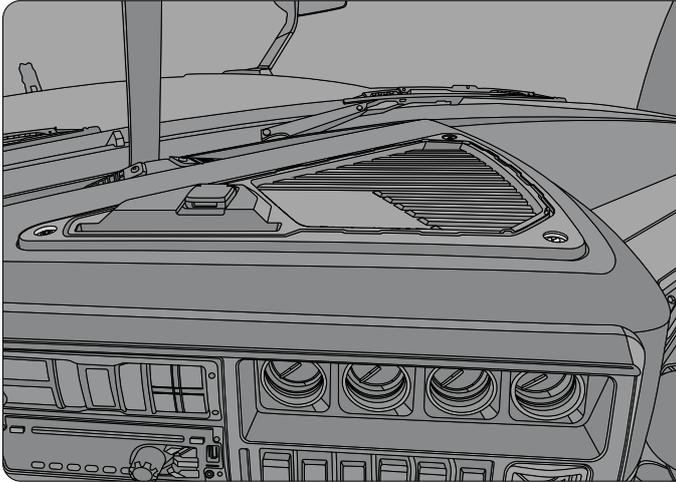

**Step 1:** Remove the three T-25 screws holding the fuse box cover in place, then remove the cover.

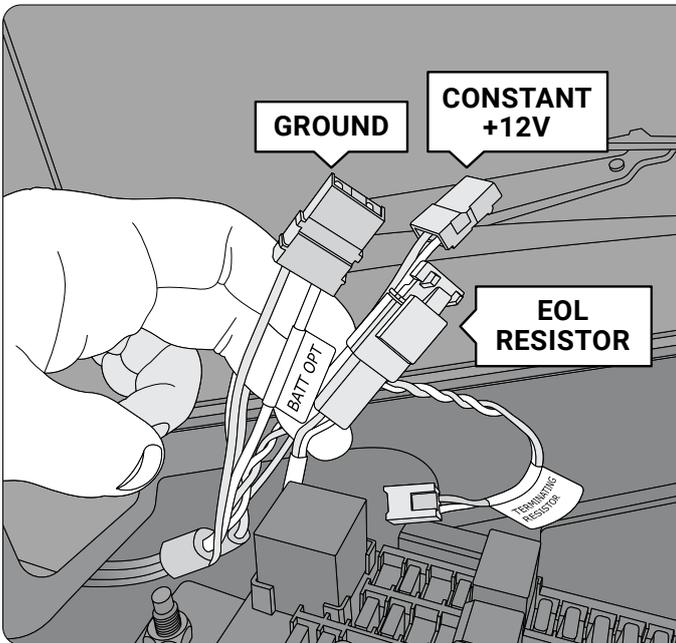


**Step 2:** Inside the fuse box, locate the connector labeled BATT OPT, and the terminating resistor. These will be used in later steps.


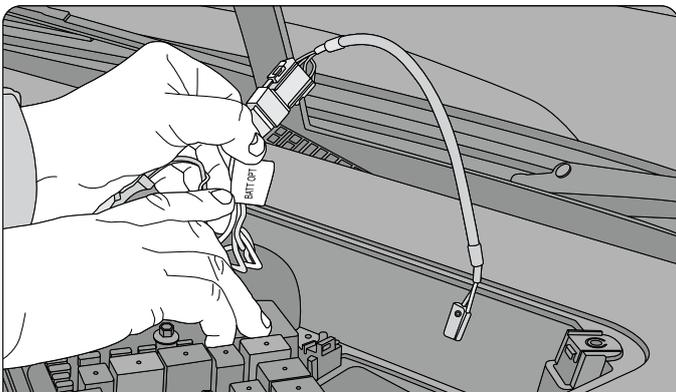


**Step 3:** Connect the 2-pin black power T-cable from the kit to the 2-pin power connector labeled BATT OPT.


**NOTE:** The other end of the T-cable is only used when daisy chaining the power circuit.

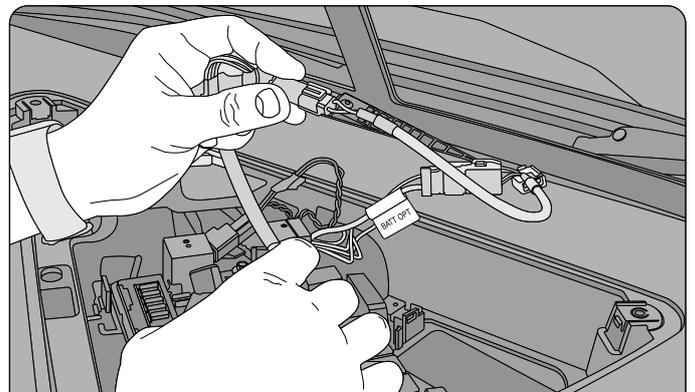


**Step 4:** Connect the other end of the T-harness to the HRN-CE10A2 harness.

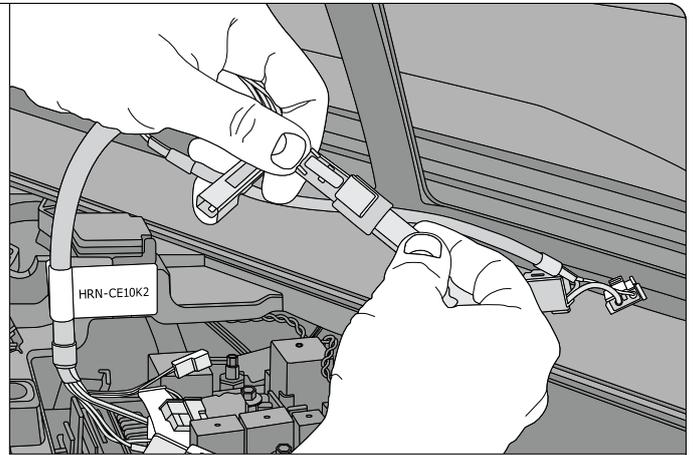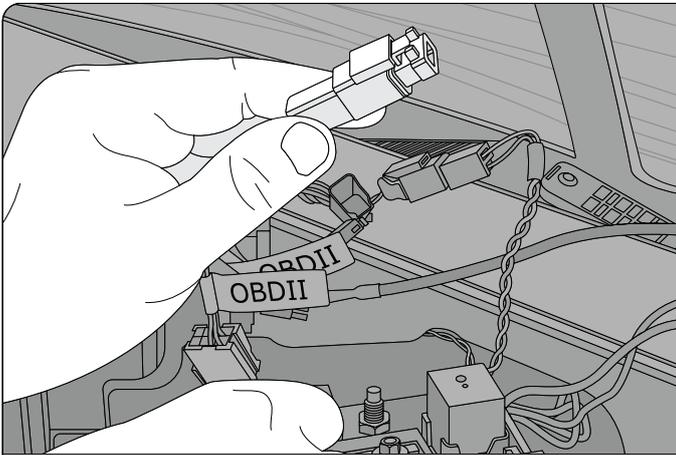

**Step 5:** Remove the terminating resistor and then plug it into the mating end of the HRN-CE10A2. Connect the HRN-CE10A2 to where the terminating resistor was removed.

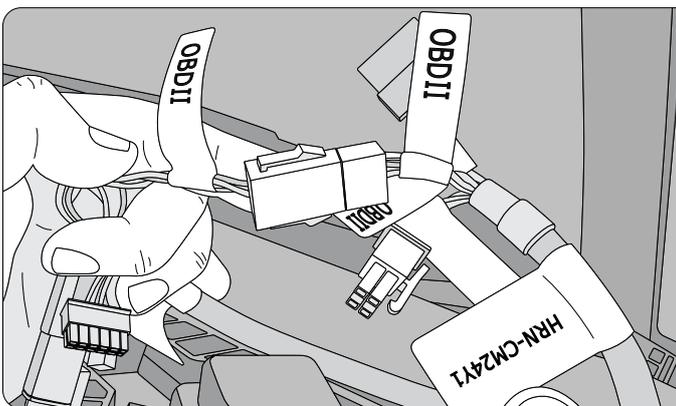


**Step 6:** Connect the 6-pin white Molex connector on the HRN-CE10A2 to the 6-pin white Molex connector on the HRN-CM24Y1. They are both labeled OBDII.

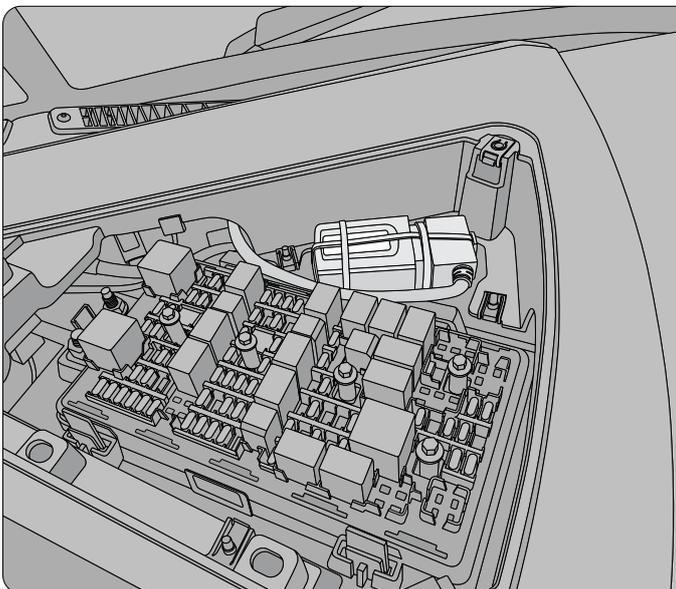


**Step 7:** Connect the HRN-CM24Y1 to the GO device. Secure the GO device to the harness using a zip tie. Secure the GO device to the frame of the fuse box using an additional two zip ties.

**NOTE:** Ensure the GPS antenna of the GO device is facing skyward.

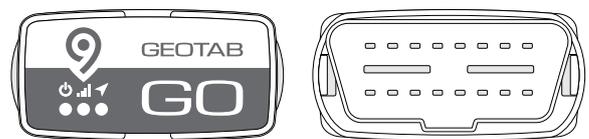

GPS antenna located at "bottom" of device.

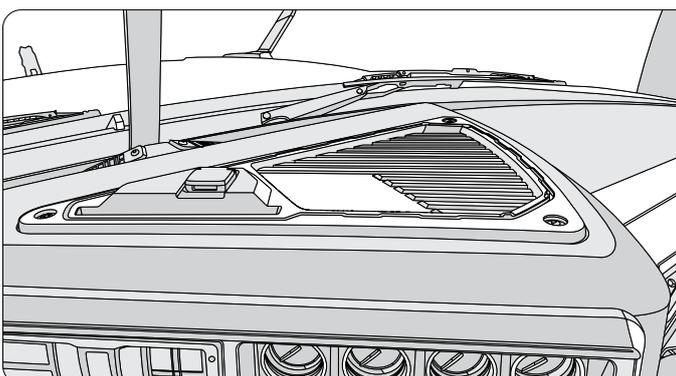

**Step 8:** Clean up all wiring using zip ties. Be sure not to obstruct any fuses. Complete an installation check for the GO device and then reinstall the fuse box cover.